ELDAT

Hilferuf-Telefon
Emergency telephone

Easywave Fon Alarm

Bedienungsanleitung
Operating Instructions

D
GB

ELDAT

Easywave Fon Alarm

Bedienungsanleitung 3

Operating Instructions 23

1	Sicherheitshinweise	4
2	Telefon in Betrieb nehmen	5
3	Bedienelemente	8
4	Wie bediene ich mein Telefon?	9
5	Telefonieren	10
6	Nebenstellenanlagen / Zusatzdienste	12
7	Menüstruktur	13
8	Telefonbuch	14
9	Anrufliste	16
10	Rufgeber	17
11	Falls es Probleme gibt	20
12	Pflegehinweise / Garantie	21
13	Stichwortverzeichnis	22

1 Sicherheitshinweise

Lesen Sie diese Bedienungsanleitung sorgfältig durch.

Bestimmungsgemäße Verwendung

Dieses Telefon ist geeignet für das Telefonieren innerhalb eines Telefonnetzes. Jede andere Verwendung gilt als nicht bestimmungsgemäß. Eigenmächtige Veränderungen oder Umbauten sind nicht zulässig. Öffnen Sie das Gerät in keinem Fall selbst und führen Sie keine eigenen Reparaturversuche durch.

Aufstellungsort

Vermeiden Sie Belastungen durch Rauch, Staub, Erschütterungen, Chemikalien, Feuchtigkeit, Hitze oder direkte Sonneneinstrahlung.

Netzteil

Achtung: Verwenden Sie nur das mitgelieferte Steckernetzteil, da andere Netzteile das Telefon beschädigen können. Sie dürfen den Zugang zum Steckernetzteil nicht durch Möbel oder andere Gegenstände versperren.

Hörgeräte kompatibel

Das Telefon ist über den Premium-Hörer vorzüglich auf Hörgeräte abgestimmt und mit den meisten am Markt befindlichen Hörgeräten kompatibel. Durch die Vielzahl der angebotenen Modelle kann keine einwandfreie Funktion mit jedem Hörgerät garantiert werden.

Achtung: Dieses Telefon kann sehr laute Lautstärken wiedergeben, wenn der Verstärker aktiviert ist und der Lautstärkeregler auf Maximum steht.
Große Vorsicht ist geboten beim Wechsel zwischen Benutzern mit normalem Gehör und vermindertem Gehör.

Entsorgung

Sie sind gesetzlich zur sachgerechten Entsorgung von Gebrauchsgütern verpflichtet. Das nebenstehende Symbol auf Ihrem Telefon bedeutet, dass elektrische und elektronische Altgeräte und Akkus getrennt vom Hausmüll zu entsorgen sind.

Elektrische oder elektronische Geräte entsorgen Sie bei einer Sammelstelle eines geeigneten Entsorgungsträgers.

Akkus entsorgen Sie beim batterievertreibenden Handel sowie bei zuständigen Sammelstellen, die entsprechende Behälter bereitstellen.

Verpackungsmaterialien entsorgen Sie entsprechend den lokalen Vorschriften.

2 Telefon in Betrieb nehmen

Sicherheitshinweise

Achtung: Lesen Sie vor der Inbetriebnahme unbedingt die Sicherheitshinweise in Kapitel 1.

Verpackungsinhalt prüfen

Zum Lieferumfang gehören:

Inhalt	Easywave Fon Alarm
Basisgerät	1
Netzteil	1
Premium-Telefonhörer	1
Hörerspiralkabel	1
Armbandsender RT26 (Rufgeber) (spritzwassergeschützt)	1
Telefonanschlusskabel	1
Batterien AA 1.5 V	4
Batterie CR2032, 3 V bereits im Rufgeber eingesetzt	1
Wandmontagenhalterung	1
Bedienungsanleitung	1

Basisgerät anschließen

Schließen Sie das Telefon wie auf der Skizze abgebildet an. Verwenden Sie aus Sicherheitsgründen nur das mitgelieferte Netzteil sowie das beigefügte Telefonanschlusskabel.

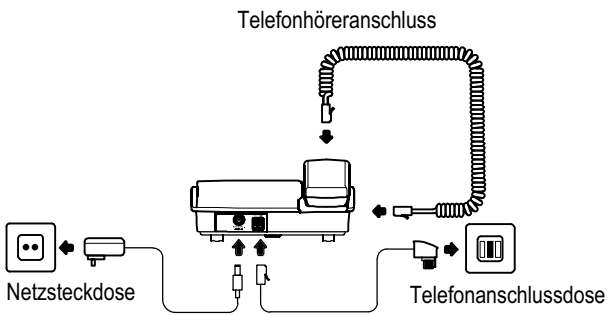

Sie können das Telefon mit oder ohne Netzteil betreiben. Alle Funktionen des Telefons können Sie jedoch nur mit richtig eingesetzten nicht entladenen Batterien, sowie richtigem Batterietyp oder Netzteil nutzen.

D

Telefon in Betrieb nehmen

Rufgeber einlernen

Nach dem Einstecken des Netzsteckers, blinkt die LED auf der Unterseite des Telefons ca. 5 Sekunden. Nach dem Erlöschen der LED können Sie den Rufgeber einlernen.

Um die Hilferuf-Funktion mittels Armbandsender RT26 nutzen zu können, muss der Armbandsender (Rufgeber) in das Telefon eingelernt werden. Das Einlernen erfolgt über die PTx-Taste auf der Unterseite des Telefons.

☞ Zur Betätigung der PTx-Taste benötigen Sie einen geeigneten Gegenstand (z. B. Kugelschreibermine).

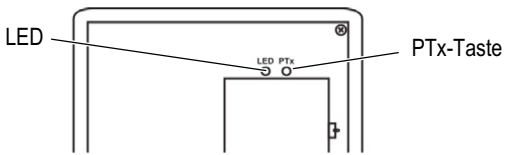

1. Drücken Sie kurz die PTx-Taste. Die LED auf der Unterseite des Telefons blinkt.
2. Drücken Sie die Sendetaste des Armbandsenders RT26. Die LED auf der Unterseite des Telefons leuchtet für 4 Sekunden.

Das Telefon ist jetzt für die Nutzung des Armbandsenders RT26 vorbereitet.

⚠ **Achtung:** Um festzustellen, ob der Rufgeber erfolgreich eingelernt ist, führen Sie einen Ruftest durch.

Batterien einlegen

Legen Sie die Batterien in das geöffnete Batteriefach ein. Verwenden Sie nur Batterien des Typs AA 1,5 V. Achten Sie auf die richtige Polung! Schließen Sie das Batteriefach.

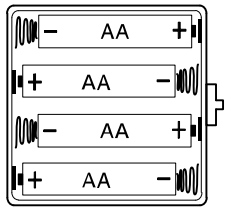

☞ Das Einlegen von Batterien ist nicht zwingend erforderlich. Sie können das Telefon mit oder ohne Batterien betreiben. Alle Funktionen des Telefons können Sie jedoch nur mit richtig eingesetzten nicht entladenen Batterien, sowie richtigem Batterietyp oder Netzteil nutzen. Achten Sie immer darauf, dass das Telefon nicht mit dem Telefonanschluss und/oder Netzanschluss verbunden ist, wenn Sie die Batterien einlegen oder austauschen.

Sind die Batterien leer, wird das Symbol angezeigt. Tauschen Sie die Batterien aus.

Datum und Uhrzeit einstellen

Datum und Uhrzeit stellen Sie über das Menü ein. Auf Seite 14 finden Sie die Position im Menü.

Nebenstellenanlagen

Auf Seite 13 erhalten Sie weitere Informationen, falls Sie Ihr Telefon an eine Nebenstellenanlage anschließen möchten.

D

Wandmontage

Führen Sie die Führungsnasen (1) der Wandmontagenhalterung (2) in die Führungsnuten (3) auf der Rückseite des Telefons ein. Schieben Sie die Wandmontagenhalterung 10 mm nach oben, bis sie hörbar einrastet. Bohren Sie ein Loch und lassen Sie eine Schraube ca. 5 mm aus der Wand herausstehen. Führen Sie die Aufhängung (4) der Montagenhalterung (2) über die Schraube und schieben Sie das Telefon nach unten.

⚠ **Achtung:** Unter dem zu bohrenden Loch dürfen sich keine Kabel befinden.

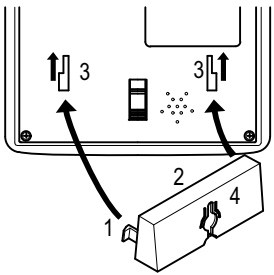

Drehen Sie den Einhängehaken (5) in der Telefonhörerablage um, damit Sie den Telefonhörer einhängen können.

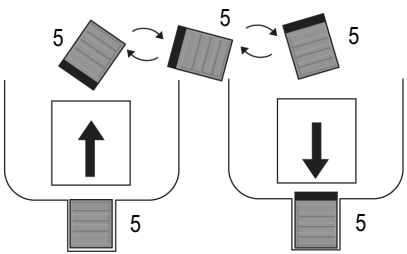

D

3 Bedienelemente

Telefon

1 Zurückrufen
2 Direktwahltaste M1 (Hilferuf-Nummer 1)
3 Löschen
4 Direktwahltaste M2 (Hilferuf-Nummer 2)
5 Aufwärts blättern
6 Direktwahltaste M3 (Hilferuf-Nummer 3)
7 Abwärts blättern
8 LED Hilferuf-Geber / Anzeige neuer Anruf
9 Menütaste
10 Anrufliste (CLIP) / Telefonbuch
11 R-Taste
12 Mikrofon stummschalten
13 Wahlwiederholung
14 LED Freisprechen
15 Freisprechen
16 LED Telefon klingelt
17 Hörerlautstärke verstärken +40 dB
18 LED Hörerlautstärke verstärkt
19 Drehregler Hörerlautstärke (verdeckt unter Premium-Hörer)
20 Schieberegler “Klingellautstärke”
21 Schieberegler “Klang”
22 Schieberegler “Freisprechlautstärke”

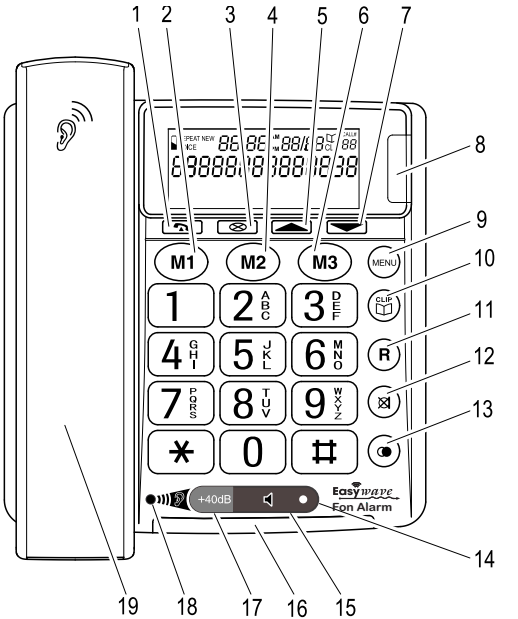

Rufgeber

1 automatischen Hilferuf starten / Rufgeber einlernen
2 LED: Sendevorgang bzw. Batterieladekapazität anzeigen

Die Tasten werden in dieser Bedienungsanleitung mit einer einheitlichen Kontur abgebildet. Abweichungen von Tastensymbolen Ihres Telefons gegenüber den hier abgebildeten Tastensymbolen sind möglich.

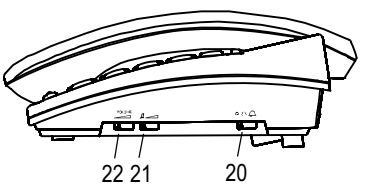

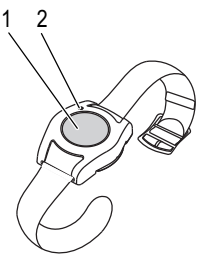

D

4 Wie bediene ich mein Telefon?

Darstellungen und Schreibweisen

	Nummern oder Buchstaben eingeben
[*]	Abgebildete Taste kurz drücken
2 x [*]	Abgebildete Taste 2 x kurz drücken
2 sec [*]	Abgebildete Taste 2 Sek. drücken
halten [*]	Abgebildete Taste halten
loslassen [*]	Abgebildete Taste loslassen
	Telefon klingelt
	Hörer abnehmen
	Hörer auflegen
>Text<	Blinkender Text im Display
DEUTSCH oder [Buch]	Text oder Symbole im Display

Symbole im Display

Symbol	Beschreibung
[Batterie]	Konstant: Tauschen Sie die Batterien.
14:45	Anzeige der Uhrzeit ☞ Seite 14
19/09	Anzeige des Datums ☞ Seite 14
[Buch]	Sie befinden sich im Telefonbuch. ☞ Seite 15
CLIP	Sie befinden sich in der Anrufliste. ☞ Seite 10
NEW	Der Eintrag in der Anrufliste ist neu. ☞ Seite 10
REPEAT	Der Anrufer in der Anrufliste hat mehrmals angerufen. ☞ Seite 10
VOICE	Blinkend: Sie befinden sich im Aufnahmemodus ☞ Seite 14 und 17. Konstant: Für diesen Telefonbucheintrag wurde ein Name aufgenommen.
+	Es wird eine Hilferuf-Nummer (M1, M2 oder M3) gewählt ☞ Seite 17.

Navigation im Menü

Alle Funktionen sind über unterschiedliche Menüs zu erreichen. Den Weg zur gewünschten Funktion entnehmen Sie der Menüstruktur ☞ Seite 14.

[MENU]	Hauptmenü öffnen
[▲] oder [▼]	Gewünschtes Untermenü auswählen
[✆]	Untermenü öffnen
[▲] oder [▼]	Gewünschte Einstellung auswählen
	Über Tastenfeld Nummern oder Buchstaben eingeben
[✆]	Eingaben bestätigen
[⊗]	Programmier- und Speichervorgänge abbrechen und in den Standby-Modus zurückkehren

☞ Jeder Vorgang wird automatisch abgebrochen, wenn innerhalb von 15 Sekunden keine Eingabe erfolgt.

Telefonbucheinträge erstellen - Beispiel

Wie Sie in den Menüs navigieren und Eingaben vornehmen ist hier anhand des Beispiels **Telefonbucheinträge erstellen** erklärt. Verfahren Sie bei allen Einstellungen wie bei diesem Beispiel.

[MENU]	Hauptmenü öffnen
[▲] oder [▼] NUMMER SPEICHERN, [✆]	Untermenü auswählen und bestätigen
, [✆]	Rufnummer eingeben und bestätigen (max. 22 Ziffern)
, [✆]	Namen eingeben und bestätigen (max. 16 Buchstaben)

D

5 Anrufliste

Insgesamt werden 64 Rufnummern in einer Anrufliste gespeichert. Die blinkende rote LED zeigt an, dass neue Anrufe in der Anrufliste gespeichert wurden.

Rufnummern aus der Anrufliste anzeigen

▲ oder ▼	Anrufliste öffnen und Eintrag auswählen

Meldungen im Display:

Display	Beschreibung
NEW	Der Eintrag in der Anrufliste ist neu.
REPEAT	Der Anrufer in der Anrufliste hat mehrmals angerufen.
FERNGESPRÄCH	Es handelt sich um ein internationales Gespräch oder um ein Gespräch von einer Nebenstellenanlage.
KEINE NUMMER	Die Rufnummer wurde nur teilweise oder fehlerhaft empfangen. Die Information der Rufnummer ist nicht verfügbar.
UNTERDRÜCKT	Der Anrufer hat das Senden seiner Rufnummer unterdrückt oder es handelt sich um ein Gespräch von einer Nebenstellenanlage.

Rufnummer aus der Anrufliste im Telefonbuch speichern

Eine Rufnummer kann direkt aus der Anrufliste im Telefonbuch gespeichert werden.

▲ oder ▼	Anrufliste öffnen und Eintrag auswählen
2 sec MENU	Speichervorgang starten
KOPIE SPEICHER , ☎	Speichervorgang bestätigen

Die Rufnummer wurde im Telefonbuch ohne Namen abgelegt. Geben Sie jetzt einen Namen für die Rufnummer ein ☞ **Einträge im Telefonbuch ändern** Seite 15.

☞ Sobald die Rufnummer im Telefonbuch mit einem Namen gespeichert wurde, erscheint in der Anrufliste zusätzlich der eingegebene Name.

Rufnummern aus der Anrufliste löschen

Einzelne Rufnummer löschen

▲ oder ▼	Anrufliste öffnen und Eintrag auswählen
⊗ LÖSCHEN ?	Löschvorgang aktivieren
2 sec ⊗	Löschvorgang bestätigen
	oder
▲ oder ▼	Löschvorgang abbrechen

Alle Rufnummern löschen

▲ oder ▼	Anrufliste öffnen und Eintrag auswählen
2 sec ⊗ ALLE LÖSCHEN ?	Löschvorgang aktivieren
2 sec ⊗	Löschvorgang bestätigen
	oder
▲ oder ▼	Löschvorgang abbrechen

☞ Kontrollieren Sie vor dem Löschen der Rufnummern, ob die Einträge angesehen wurden.

D

6 Telefonieren

Anruf annehmen

(( )), oder [ ]	Anruf annehmen

Gespräch beenden

[ ] oder	Gespräch beenden

Anrufen

	Rufnummer eingeben (max. 22 Ziffern)
[⊗]	Bei Falscheingabe letzte Ziffer löschen
oder [ ]	Rufnummer wählen

☞ Sie können auch zuerst den Hörer abnehmen und erhalten damit das Freizeichen. Die eingegebenen Ziffern Ihrer gewünschten Rufnummer werden sofort gewählt. Eine Korrektur einzelner Ziffern der Rufnummer ist bei dieser Form des Gesprächsaufbaus nicht möglich.

Wahlwiederholung

Ihr Telefon speichert die zuletzt gewählte Rufnummer.

oder [ ], [●]	zuletzt gewählte Rufnummer wählen

Entgangene Anrufe zurückrufen

Ihr Telefon speichert 64 entgangene Anrufe in einer Anrufliste.

[CLIP]	Anrufliste öffnen
[▲] oder [▼]	Eintrag auswählen
[ ],	Verbindung herstellen

Rufnummern aus dem Telefonbuch wählen

Sie müssen Rufnummern im Telefonbuch gespeichert haben ☞ Seite 15.

[ ]	Telefonbuch öffnen
[▲] oder [▼]	Eintrag auswählen
[ ]	Verbindung herstellen

Direktwahl

Sie können die Direktwahltasten M1, M2 oder M3 als normale Direktwahl oder als Speicherplätze für den automatischen Hilferuf nutzen. Sie müssen Rufnummern als Direktwahl gespeichert haben ☞ Seite 17.

[M1], [M2] oder [M3]	Gewünschte Direktwahltaste drücken
oder [ ]	Verbindung herstellen

Weitere Informationen über den automatischen Hilferuf ☞ Seite 17.

Nummern verketten und übertragen

Die Funktion findet Anwendung bei komplexeren Telefondiensten, wie z. B. Telefonbanking, Call by Call oder Calling-Card-Verfahren. Sie können mehrere gespeicherte Nummern während einer bestehenden Verbindung aus dem Telefonbuch übertragen. Übertragungen von Nummern aus dem Telefonbuch können Sie mit manuellen Nummereingaben kombinieren. Sie können während einer Verbindung beliebig viele Einträge aus dem Telefonbuch verketten und übertragen.

[ ]	Während einer bestehenden Verbindung Telefonbuch öffnen
[▲] oder [▼], [ ]	Telefonbucheintrag auswählen und Nummer übertragen

Einstellen der Hörerlautstärke

Sie können die Hörerlautstärke mit einem Drehregler anpassen, wenn die Verstärkung auf +40 dB aktiviert ist.

[0 1 2 3]	Lautstärke mit Drehregler anpassen

Verstärkung der Hörerlautstärke auf +40 dB

Die Hörerlautstärke kann durch Betätigen der linken Lautsprechertaste auf +40 dB verstärkt werden.

[+40dB]	Hörerlautstärke verstärken

D

Telefonieren

Klangregelung

Sie können den Klang im Hörer mit einem Schieberegler an der rechten Gehäuseseite anpassen.

Klang mit Schieberegler anpassen

> Die Klangregelung funktioniert nur, wenn die Verstärkung auf +40 dB aktiviert ist.

Klingellautstärke

Sie können die Klingellautstärke mit einem Schieberegler an der rechten Gehäuseseite anpassen.

Lautstärke mit Schieberegler anpassen

Anzeige der Gesprächsdauer

Während eines Gesprächs wird die Gesprächsdauer in Minuten und Sekunden angezeigt.

Freisprechen

Nutzen Sie diese Funktion, um den Gesprächspartner über den Lautsprecher zu hören.

[ ]	Freisprechen einschalten
[ ]	Freispechen ausschalten

Einstellen der Freisprechlautstärke

Sie können die Freisprechlautstärke mit einem Schieberegler an der rechten Gehäuseseite anpassen.

Lautstärke mit Schieberegler anpassen

Mikrofon im Mobilteil stummschalten

Sie können während eines Telefongesprächs das Mikrofon des Mobilteils aus- und einschalten.

halten [⊗]	Mikrofon ausschalten (stummschalten)
loslassen [⊗]	Mikrofon einschalten

D

7 Nebenstellenanlagen / Zusatzdienste

R-Taste an Nebenstellenanlagen

Ist Ihr Telefon an einer Nebenstellenanlage angeschlossen, können Sie über die **R-Taste** Funktionen, wie z. B. Anrufe weiterleiten und automatischen Rückruf, nutzen. Lesen Sie bitte in der Bedienungsanleitung Ihrer Nebenstellenanlage, welche Flash-Zeit Sie zur Nutzung dieser Funktionen einstellen müssen. Ob Ihr Telefon an Ihrer Nebenstellenanlage einwandfrei funktioniert, erfahren Sie bei dem Händler, bei dem die Anlage gekauft wurde. Einstellen der Flash-Zeit ☞ Seite 14

Wahlpause

Bei Nebenstellenanlagen ist es erforderlich, eine Amtskennzahl vorzuwählen, um ein Freizeichen zu bekommen. Bei wenigen, älteren Nebenstellenanlagen dauert es einige Zeit, bis das Freizeichen zu hören ist. Für diese Nebenstellenanlagen kann nach der Amtskennzahl eine Wahlpause eingefügt werden, um direkt weiter wählen zu können, ohne das Freizeichen abzuwarten.

[●]	Wahlpause einfügen “P” wird im Display angezeigt.

Nach der Amtskennzahl wartet Ihr Telefon für ca. 3 Sekunden mit dem Wählen der eigentlichen Rufnummer.

☞ Die Pause kann auch bei der Eingabe von Rufnummern in das Telefonbuch eingegeben werden.

R-Taste und Zusatzdienste

Ihr Telefon unterstützt Zusatzdienste Ihres Netzbetreibers, wie z. B. Makeln, Anklopfen und Konferenz. Über die **R-Taste** können Sie diese Zusatzdienste nutzen. Bitte fragen Sie Ihren Netzbetreiber, welche Flash-Zeit Sie zur Nutzung von Zusatzdiensten einstellen müssen. Zur Freischaltung von Zusatzdiensten wenden Sie sich bitte an Ihren Netzbetreiber. Einstellen der Flash-Zeit ☞ Seite 14.

Rufnummernanzeige (CLIP[1])

Wenn diese Funktion an Ihrer Telefonleitung zur Verfügung steht, wird Ihnen bereits die Rufnummer des Anrufers angezeigt, wenn das Telefon klingelt. Hat der Anrufer das Übertragen seiner Rufnummer unterdrückt, wird eine entsprechende Meldung angezeigt. Die Rufnummer kann nicht angezeigt und somit auch nicht in der Anrufliste gespeichert werden.

☞ Die Rufnummernanzeige ist ein optionaler Service Ihres Netzbetreibers. Fragen Sie Ihren Netzbetreiber nach weiteren Informationen.

D

[1] **CLIP: C**alling **L**ine **I**dentification **P**resentation

8 Menüstruktur

Hauptmenü

In das Hauptmenü gelangen Sie durch Drücken der Taste [MENU].

LCD KONTRAST	LCD KONTRAST 1-5	
ZEIT/DATUM	[▲], [▼] ZEIT EINGEBEN	[▲], [▼] DATUM EINGEBEN
NUMMER SPEICHERN	Nummer eingeben	Namen eingeben
NAMEN AUFNEHMEN	☞ Seite 16	
ANSAGE AUFNEHMEN	☞ Seite 17	
ANSAGE PRÜFEN	☞ Seite 17	
SPRACHE [1]	DEUTSCH	
	FRANCAIS	
	ENGLISH	
	ITALIANO	
FLASH	FLASH 100	
	FLASH 300	
KLINGELTON	KLINGELTON 1-3	
STIMME [2]	STIMME EIN	
	STIMME AUS	

[1] Die Ansagen und Displaytexte des Telefons sind in 4 Sprachen einstellbar.

[2] Das Drücken einiger Tasten wird zusätzlich von einer Stimme begleitet. Diese Stimme können Sie ein- und ausschalten.

9 Telefonbuch

Im Telefonbuch können Sie 30 Rufnummern mit den dazugehörigen Namen speichern.

- Geben Sie bei allen Rufnummern immer die Vorwahl mit ein, damit auch eingehende Ortsgespräche einem Telefonbucheintrag zugeordnet werden können.
- Ist die Speicherkapazität erschöpft, zeigt das Display beim nächsten Speichern die Meldung SPEICHER VOLL . Um wieder Platz zu schaffen, müssen Sie zuerst einen anderen Eintrag löschen.
- Die Telefonbucheinträge sind alphabetisch geordnet. Um direkt zum gewünschten Telefonbucheintrag zu gelangen, drücken Sie den entsprechenden Anfangsbuchstaben.

Namen eingeben

Die Ziffern-Tasten sind mit Buchstaben beschriftet. Durch mehrmaliges Drücken der entsprechenden Taste können Buchstaben, Ziffern und Sonderzeichen eingegeben werden.

1	Leerzeichen eingeben
⊗	Löschen

☞ Um den gleichen Buchstaben zweimal einzugeben, drücken Sie den entsprechenden Buchstaben. Warten Sie, bis der Cursor eine Stelle weitergesprungen ist. Geben Sie den Buchstaben erneut ein.

Telefonbucheinträge erstellen

MENU	Hauptmenü öffnen
▲ oder ▼, NUMMER SPEICHERN , ☎	Funktion auswählen und bestätigen
🎤, ☎	Rufnummer eingeben (max. 22 Ziffern) und bestätigen
🎤, ☎	Namen eingeben (max. 16 Stellen) und bestätigen

Telefonbucheinträge ändern

📖	Telefonbuch öffnen
▲ oder ▼	Telefonbucheintrag auswählen
2 sec MENU BEARBEITEN , ☎	Änderungsvorgang einleiten und bestätigen
🎤, ☎	Rufnummer ändern und bestätigen
🎤, ☎	Namen ändern und bestätigen

Telefonbucheinträge löschen

Einen Eintrag löschen

📖	Telefonbuch öffnen
▲ oder ▼	Telefonbucheintrag auswählen
⊗ LÖSCHEN ?	Löschvorgang aktivieren
2 sec ⊗ oder ▲▼	Löschvorgang bestätigen oder abbrechen

Alle Einträge löschen

📖	Telefonbuch öffnen
▲ oder ▼	Beliebigen Telefonbucheintrag auswählen
2 sec ⊗ ALLE LÖSCHEN ?	Löschvorgang aktivieren
2 sec ⊗ oder ▲▼	Löschvorgang bestätigen oder abbrechen

D

Telefonbuch

Namen für Telefonbucheintrag aufnehmen

Wenn Sie Rufnummern in Ihrem Telefonbuch gespeichert haben, können Sie zu jedem Telefonbucheintrag einen Namen aufnehmen. Wenn Sie dann einen Eintrag im Telefonbuch auswählen, wird Ihre Aufnahme wiedergegeben und Sie hören, welchen Eintrag Sie ausgewählt haben.

Namen aufnehmen

MENU	Hauptmenü öffnen
▲ oder ▼	Untermenü auswählen und
NAMEN AUFNEHMEN , ☎	bestätigen
▲ oder ▼	Telefonbucheintrag auswählen
halten ☎ ≥VOICE≤	Aufnahme starten
loslassen ☎	Aufnahme beenden

☞ Wenn Sie die Taste nicht loslassen, wird die Aufnahme nach 3 Sekunden automatisch beendet.

Aufnahme löschen

MENU	Hauptmenü öffnen
▲ oder ▼	Untermenü auswählen und
NAMEN AUFNEHMEN , ☎	bestätigen
▲ oder ▼	Telefonbucheintrag auswählen
⊗	Während der Wiedergabe, Aufnahme löschen

D

10 Rufgeber

Über den Rufgeber können Sie Hausnotrufdienste oder Personen zu Hilfe rufen.

☞ Es gibt viele geeignete Hausnotrufdienste, wie z. B. “Rotes Kreuz", “Malteser Hilfswerk" und “Die Johanniter". In manchen Ländern sind Hausnotrufdienste kostenpflichtig.
Sie können dieses Gerät auch als private Hilferuf-Einrichtung in der Familie nutzen.

Hilferuf-Ansage

Es befindet sich bereits eine voreingestellte Hilferuf-Ansage auf Ihrem Telefon. Diese Hilferuf-Ansage können Sie durch eine eigene Hilferuf-Ansage ersetzen. Wenn Sie einen automatischen Hilferuf starten, werden die gespeicherten Rufnummern auf den Tasten M1, M2 und M3 automatisch angerufen. Die Hilferuf-Ansage wird solange wiedergegeben, bis Ihr Hilferuf von einer dieser Personen mit der Taste “0" angenommen wird. Aus diesem Grund müssen Sie Ihre eigene Hilferuf-Ansage grundsätzlich mit dem Satz **“Nehmen Sie diesen Hilferuf mit der Taste 0 entgegen!"** beenden.

⚠ Achten Sie in Ihrer Ansage darauf, dass der Angerufene erkennt, von wem der Hilferuf kommt. Weisen Sie in Ihrer Ansage deutlich darauf hin, dass es sich um einen Hilferuf handelt und Sie Hilfe benötigen.

Hilferuf-Ansage aufnehmen

MENU	Hauptmenü öffnen
▲ oder ▼ ANSAGE AUFNEHMEN	Untermenü auswählen
halten ☎ ≥VOICE≤	Aufnahme starten
loslassen ☎	Aufnahme beenden

Hilferuf-Ansage anhören

MENU	Hauptmenü öffnen
▲ oder ▼	Untermenü auswählen
☎	Hilferuf-Ansage abspielen

Hilferuf-Ansage löschen

MENU	Hauptmenü öffnen
▲ oder ▼ ANSAGE PRÜFEN	Untermenü auswählen
☎	Hilferuf-Ansage abspielen
⊗	Hilferuf-Ansage löschen

Hilferuf-Nummern / Direktwahlnummern speichern

Sie können die Direktwahltasten M1, M2 und M3 als normale Direktwahl oder als Speicherplätze für den automatischen Hilferuf nutzen.

MENU	Hauptmenü öffnen
▲ oder ▼ NUMMER SPEICHERN, ☎	Untermenü auswählen und bestätigen
0-9, ☎	Rufnummer eingeben und bestätigen (max. 22 Ziffern)
M1, M2 oder M3, ☎	Direktwahltaste auswählen und bestätigen

☞ Die gespeicherten Rufnummern auf den Direktwahltasten können nicht gelöscht werden. Beim Speichern neuer Rufnummern werden die alten Einträge überschrieben.

D

Rufgeber

Automatischer Hilferuf

Der automatische Hilferuf kann durch drücken und halten der Tasten M1, M2 oder M3 am Telefon oder über den Rufgeber gestartet werden. Der Rufgeber muss in das Telefon eingelernt werden (siehe Seite 6). Haben Sie keine Rufnummer auf einer der Tasten M1, M2 oder M3 gespeichert, wird keine Rufnummer gewählt, sondern ein lautes Warnsignal vom Telefon wiedergegeben.

☞ Achten Sie darauf, dass sich der Rufgeber in Reichweite des Telefons befindet.
Es sollte sich immer eine volle Batterie im Rufgeber befinden.

Automatischer Hilferuf über das Telefon

5 sec **M1**, **M2** oder **M3**	automatischen Hilferuf starten
5 sec **M1**, **M2**, **M3** oder 🕪	automatischen Hilferuf beenden

Automatischer Hilferuf über den Rufgeber

Halten Sie die Sendetaste (1) am Rufgeber solange gedrückt, bis ein Warnsignal zu hören ist.

☞ Nach Auslösen des Hilferufs ist ein erneuter Hilferuf über Funk erst wieder nach 10 Minuten möglich.

Automatischen Hilferuf starten / beenden

Ihr Telefon verhält sich beim Starten des automatischen Hilferufs folgendermaßen:

1. Der Lautsprecher des Telefons schaltet sich ein. Ein Signal “Hilferuf aktiv" ist 15 Sekunden lang zu hören.
2. Anschließend ist das Freizeichen zu hören und die gespeicherten Rufnummern der Tasten M1, M2 und M3 werden automatisch, nacheinander im Abstand von ca. 60 Sekunden gewählt. Die aufgezeichnete Hilferuf-Ansage wird in einer Endlosschleife abgespielt.
3. Sobald der Anruf von einer Person entgegengenommen wird, hört diese die Hilferuf-Ansage. Durch Betätigen der Taste “0" stoppt die Person die Hilferuf-Ansage. Es kann jetzt für 3 Minuten telefoniert werden. In dieser Zeit bleibt am Telefon das Freisprechen aktiv.
4. Nach Ablauf der 3 Minuten wird die Verbindung unterbrochen. Es wird, wie oben beschrieben, erneut versucht, zu den gespeicherten Rufnummern der Tasten M1, M2 und M3 eine Verbindung herzustellen.
5. Wenn das Gespräch vor Ablauf der 3 Minuten unterbrochen oder wenn aufgelegt wurde, wird weiterhin versucht, eine Verbindung zu den nächsten gespeicherten Rufnummern herzustellen, bis alle 3 Nummern gewählt wurden. Am Telefon ist zunächst das Besetztsignal zu hören.

☞ Ein ausgelöster Hilferuf kann nach 5 Sekunden durch dreisekündiges Betätigen der Tasten M1, M2 oder M3 beendet werden.

D

Batterie Rufgeber

Der Rufgeber verfügt über eine Batteriekontrollfunktion, welche die Kapazität der Batterie während des Sendevorgangs prüft. Blinkt die LED während der Tastenbetätigung oder leuchtet die LED gar nicht, muss die Batterie gewechselt werden.

Der Rufgeber ist spritzwassergeschützt. Um die Dichtigkeit auch nach einem Batteriewechsel zu erhalten, empfehlen wir, die Batterie nur von Ihrem Fachhändler wechseln zu lassen.

Weitere Rufgeber einlernen

Als Rufgeber können auch weitere Easywave-Produkte, wie z. B. der Halsbandsender RT27, der Wandtaster RT28 oder die Sturzmatte genutzt werden.

Insgesamt können acht Rufgeber in das Telefon eingelernt werden (siehe Seite 6).

Beim Einlernen von mehr als 8 Rufgebern, werden immer die zuerst eingelernten Rufgeber überschrieben.

Rufgeber löschen

Mit der Löschfunktion werden alle eingelernten Rufgeber gelöscht.

1. Drücken Sie die PTx-Taste auf der Unterseite des Telefons solange, bis die LED schnell blinkt.
2. Lassen Sie die PTx-Taste los.
3. Drücken Sie erneut die PTx-Taste länger als 2 Sekunden, bis die LED leuchtet.

Nach 4 Sekunden erlischt die LED und alle gespeicherten Rufgeber sind gelöscht.

11 Falls es Probleme gibt

Service-Hotline

Haben Sie Probleme mit Ihrem Telefon, kontrollieren Sie zuerst die folgenden Hinweise. Bei technischen Fragen und Garantieansprüchen wenden Sie sich an Ihren Fachhändler.

Fragen und Antworten

Fragen	Antworten
Kein Telefongespräch möglich	- Die Telefonleitung ist nicht korrekt angeschlossen oder gestört. Verwenden Sie nur das mitgelieferte Telefonanschlusskabel. - Das Netzteil ist nicht eingesteckt oder es liegt ein totaler Stromausfall vor.
Einige Funktionen, z. B. +40 dB Verstärkung oder Freisprechen funktionieren nicht	- Kontrollieren Sie, dass die Batterien richtig eingesetzt sind, der Batterietyp stimmt und sie nicht entladen sind.
Die Rufnummernanzeige (CLIP[1]) funktioniert nicht	- Die Rufnummernanzeige ist ein optionaler Service Ihres Netzbetreibers. Bitte fragen Sie Ihren Netzbetreiber nach weiteren Informationen. - Der Anrufer hat das Übertragen seiner Rufnummer unterdrückt.
LED am Rufgeber blinkt oder leuchtet nicht	- Batterie wechseln
Telefon reagiert nicht auf Rufgeber	- Batterie prüfen - Rufgeber ggf. erneut in das Telefon einlernen

[1] **CLIP: C**alling **L**ine **I**dentification **P**resentation = Anzeige der Rufnummer eines Anrufers.

12 Pflegehinweise / Garantie

Pflegehinweise

- Reinigen Sie die Gehäuseoberflächen mit einem weichen und fusselfreien Tuch.
- Verwenden Sie keine Reinigungsmittel oder Lösungsmittel.

Garantie

Das Gerät wurde nach den modernsten Produktionsverfahren hergestellt und geprüft. Ausgesuchte Materialien und hoch entwickelte Technologien sorgen für einwandfreie Funktion und lange Lebensdauer. Ein Garantiefall liegt nicht vor, wenn die Ursache einer Fehlfunktion des Geräts bei dem Telefonnetzbetreiber oder einer eventuell zwischengeschalteten Nebenstellenanlage liegt. Die Garantie gilt nicht für die in den Produkten verwendeten Batterien, Akkus oder Akkupacks. Die Garantiezeit beträgt 24 Monate, gerechnet vom Tage des Kaufs.

Innerhalb der Garantiezeit werden alle Mängel, die auf Material- oder Herstellungsfehler zurückzuführen sind, kostenlos beseitigt. Der Garantieanspruch erlischt bei Eingriffen durch den Käufer oder durch Dritte. Schäden, die durch unsachgemäße Behandlung oder Bedienung, natürliche Abnutzung, durch falsches Aufstellen oder Aufbewahren, durch unsachgemäßen Anschluss oder Installation sowie durch höhere Gewalt oder sonstige äußere Einflüsse entstehen, fallen nicht unter die Garantieleistung. Wir behalten uns vor, bei Reklamationen die defekten Teile auszubessern, zu ersetzen oder das Gerät auszutauschen. Ausgetauschte Teile oder ausgetauschte Geräte gehen in unser Eigentum über. Schadenersatzansprüche sind ausgeschlossen, soweit sie nicht auf Vorsatz oder grober Fahrlässigkeit des Herstellers beruhen.

Sollte Ihr Gerät dennoch einen Defekt innerhalb der Garantiezeit aufweisen, wenden Sie sich bitte unter Vorlage Ihrer Kaufquittung ausschließlich an das Geschäft, in dem Sie Ihr Gerät gekauft haben. Alle Gewährleistungsansprüche nach diesen Bestimmungen sind ausschließlich gegenüber Ihrem Fachhändler geltend zu machen. Nach Ablauf von zwei Jahren nach Kauf und Übergabe unserer Produkte können Gewährleistungsrechte nicht mehr geltend gemacht werden.

Konformitätserklärung

Dieses Gerät erfüllt die Anforderungen der EU-Richtlinie:

1999/5/EG Richtlinie über Funkanlagen und Telekommunikationsendeinrichtungen und die gegenseitige Anerkennung ihrer Konformität. Die Konformität mit der o. a. Richtlinie wird durch das CE-Zeichen auf dem Gerät bestätigt.

Die Konformitätserklärung können Sie bei Ihrem Fachhändler anfordern.

CE

D

13 Stichwortverzeichnis

Ä

Ändern, 15
Anruf annehmen, 11
Anrufen, 11
Anrufliste, 10
Automatischer Hilferuf, 18

B

Basisgerät, 5
Batterie Rufgeber, 19
Batterien einlegen, 6
Bedienelemente, 8

D

Darstellungen, 9
Datum, 6
Datum und Uhrzeit einstellen, 14
Direktwahl, 11
Direktwahlnummern speichern, 17
Displaymeldungen, 10

E

Eingegangene Anrufe zurückrufen, 11
Erstellen, 15

F

Fehlerbehebung, 20
Fragen und Antworten, 20
Freisprechen, 12
Freisprechlautstärke, 12

G

Garantie, 21
Gespräch beenden, 11
Gesprächsdauer, 12

H

Hauptmenü, 14
Hilferuf-Ansage, 17
Hilferuf-Nummern speichern, 17
Hörerlautstärke, 11
Hörerlautstärke verstärken, 11

I

Inbetriebnahme, 5

K

Klangregelung, 12
Klingellautstärke, 12
Klingelton einstellen, 14
Konformitätserklärung, 21
Kontrast einstellen, 14

L

Löschen, 15

M

Meldungen, 10
Menüstruktur, 14
Mikrofon stummschalten, 12

N

Namen für Telefonbucheintrag aufnehmen, 16
Namenseingabe, 15
Navigation im Menü, 9
Nebenstellenanlagen, 13
Nummern verketten und übertragen, 11

P

Pflegehinweise, 21
Probleme, 20

R

R-Taste an Nebenstellenanlagen, 13
R-Taste und Zusatzdienste, 13
Rufgeber, 17
Rufgeber einlernen, 6
Rufnummer aus der Anrufliste im Telefonbuch speichern, 10
Rufnummern aus dem Telefonbuch wählen, 11
Rufnummern aus der Anrufliste anzeigen, 10
Rufnummern aus der Anrufliste löschen, 10
Rufnummernanzeige, 13

S

Schreibweisen, 9
Service-Hotline, 20
Sicherheitshinweise, 4
Speichern, 15
Sprache einstellen, 14
Symbole im Display, 9

T

Telefonbuch, 15
Telefonbucheinträge, 15
Telefonbucheinträge erstellen, 9
Telefonieren, 11
Texteingabe, 15

U

Uhrzeit, 6

V

Verpackungsinhalt, 5

W

Wahlpause, 13
Wahlwiederholung, 11
Wandmontage, 7
Wie bediene ich mein Telefon?, 9

Z

Zusatzdienste, 13

1	Safety Information	24
2	Preparing the Telephone	25
3	Operating Elements	28
4	Operating the Telephone	29
5	Telephoning	30
6	Private Branch Exchanges / Suppl. Services	32
7	Menu Structure	33
8	Phone Book	34
9	Call List	36
10	Wristband Transmitter	37
11	In Case of Problems	40
12	Maintenance / Guarantee	41
13	Index	42

1 Safety Information

Please read this operating instruction manual thoroughly.

Intended use

The telephone is suitable for telephoning within a public telephone network system. Any other use is considered unintended use. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

Installation location

Prevent excessive exposure to smoke, dust, vibration, chemicals, moisture, heat and direct sunlight.

Power supply

⚠ **Caution:** Only use the power adapter plug supplied because other power supplies could damage the telephone. Ensure access to the power adapter plug is not obstructed by furniture or such.

Hearing aid compatibility

The telephone is compatible with most popular hearing aids on the market. However, due to the wide range of hearing aids available, there is no guarantee that the telephone will function problem-free with every model.

⚠ **Caution:** This telephone is capable of producing very loud volume levels when the amplifier is switched on and the volume control is set to maximum. Extreme caution should be taken if the handset is to be shared between users with normal hearing and those with hearing impairment.

Disposal

You are obliged to dispose of consumable goods properly in accordance with the applicable legal regulations. The adjacent symbol on the telephone indicates that electrical and electronic apparatus and batteries no longer required must be disposed of separate from domestic waste.

Electrical and electronic devices must be disposed of at suitable collection points provided by the public waste authorities.

Batteries must be disposed of at the point of sale or at the appropriate collection points provided by the public waste authorities.

Packaging materials must be disposed of according to local regulations.

2 Preparing the Telephone

Safety information

Attention: It is essential to read the Safety Information in Chapter 1 before starting up.

Checking the package contents

The box contains:

Content	Easywave Phone Alarm
Base unit	1
Power adapter plug	1
Premium receiver	1
Helix cable for receiver	1
Wristband transmitter RT26 (splashproof)	1
Telephone connection cable	1
Batteries, AA 1.5 V	4
Battery CR2032, 3 V already installed in wristband transmitter	1
Wall-mounting bracket	1
Operating manual	1

Connecting the base unit

Connect the telephone as illustrated in the diagram. For reasons of safety, only use the power adapter plug and telephone connection cable supplied.

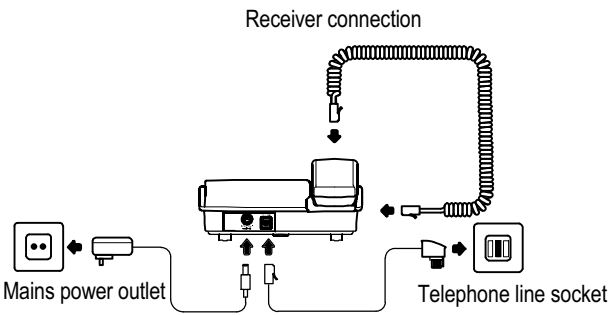

The telephone can be operated with or without the power adapter plug. The full range of telephone functions can only be used when the batteries are correctly inserted, sufficiently charged and of the correct type or the power adapter plug is connected.

GB

Preparing the Telephone

Programming the wristband transmitter

After connecting the power plug, the LED on the underside of the phone flashes for approx. 5 seconds. After the LED has stopped flashing, you can programme the wristband transmitter.

In order to use the emergency call function using the RT26 wristband transmitter, the telephone must be programmed for the wristband transmitter. Programming is completed using the PTx button on the underside of the phone.

☞ A suitable object is required in order to press the PTx button (e.g. the nib of a ballpoint pen).

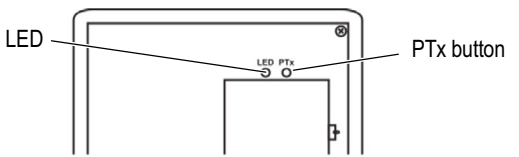

4. Press the PTx button briefly. The LED on the underside of the phone flashes.
5. Press the Transmit button on the RT26 wristband transmitter. The LED on the underside of the phone lights up for 4 seconds.

The phone is now ready to operate via the RT26 wristband transmitter.

⚠ **Attention:** To ensure that the wristband transmitter is programmed correctly, complete a call test.

Inserting the Batteries

Insert the batteries in the open battery compartment. Only use batteries of the type AA 1.5 V. Pay attention to the correct polarity. Close the battery compartment cover.

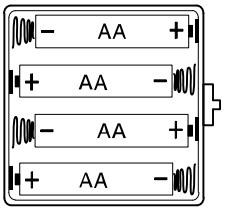

☞ Insertion of batteries is not absolutely essential. The telephone can be operated with or without batteries. The full range of telephone functions can only be used when the batteries are correctly inserted, sufficiently charged and of the correct type or the power adapter plug is connected. Pay attention that the telephone is not connected to the telephone line socket and/or mains power socket when batteries are being inserted or replaced.

When the batteries are empty, the icon appears. Replace the batteries.

Setting the time and date

The time and date are set via the menu. Refer to Page 33 for the sequence of menu option selections.

Private branch exchanges

The information on Page 32 explains how to install your telephone in a private branch exchange.

GB

Wall installation

Feed the guide tabs (1) on the wall-mounting bracket (2) in the slots (3) on the rear side of the telephone. Slide the wall-mounting bracket 10 mm upwards until it audibly locks into place. Drill a hole and insert a screw leaving about 5 mm of the screw projecting from the wall. Guide the mounting hole (4) in the mounting bracket (2) over the screw and slide the telephone downwards.

Attention: Ensure there are no cables in the wall at the point where the hole is drilled.

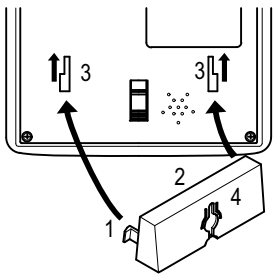

Turn the hook in the receiver cradle so that the receiver can be placed on-hook.

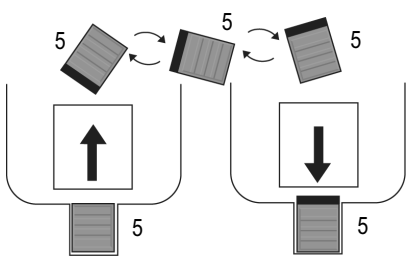

GB

3 Operating Elements

Telephone

1 Callback
2 One-touch dialling key, M1 (1st emergency number)
3 Delete
4 One-touch dialling key, M2 (2nd emergency number)
5 Scroll upwards
6 One-touch dialling key, M3 (3rd emergency number)
7 Scroll downwards
8 LED emergency call transmitter / New call indicator
9 Menu button
10 Calls list (CLIP) / Phone book
11 R-button
12 Microphone muting function
13 Redialling
14 LED, handsfree mode
15 Handsfree
16 LED, incoming call
17 Increase receiver volume +40 dB
18 LED, receiver volume increased
19 Receiver volume knob (hidden under premium receiver)
20 "Ringing volume" slide control
21 "Tone" slide control
22 "Handsfree volume" slide control

Wristband transmitter

1 Start automatic emergency call / Programme wristband transmitter
2 LED: Indicates transmission and battery charge capacity

The buttons in this operating manual are depicted with a uniform contour. Variations in the symbols on the telephone buttons compared to those depicted here are possible.

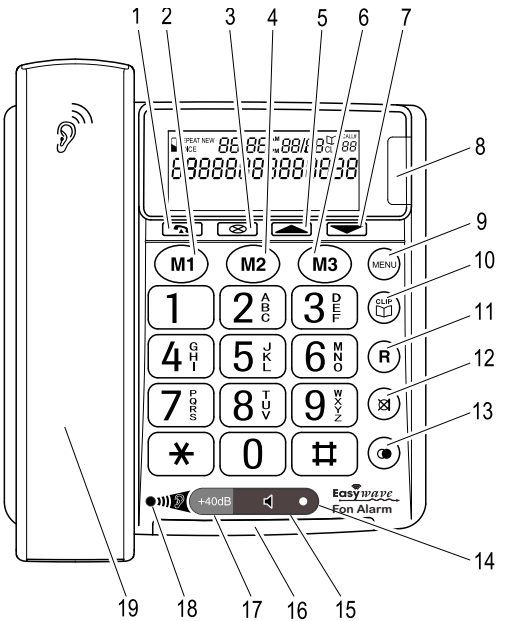

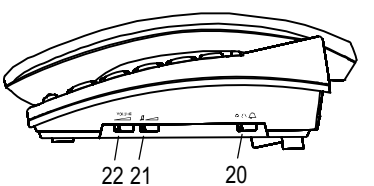

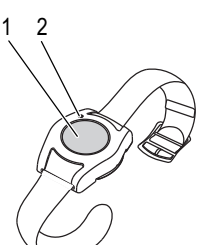

4 Operating the Telephone

Display and notation of operation sequences

	Enter digits or letters
[*]	Press the button depicted briefly
2 x [*]	Press the button depicted twice, briefly
2 sec. [*]	Press the button depicted for 2 sec.
Press and hold [*]	Press and hold the button depicted
Release [*]	Release the button depicted
	Telephone rings
	Lift the receiver
	Replace the receiver on-hook
>Text<	Text flashes in the display
GERMAN or [book]	Text or icons in the display

Icons in the display

Icon	Description
[battery]	On: Change the batteries.
14:45	Time display ☞ Page 33
19/09	Date display ☞ Page 33
[book]	The phone book is open ☞ Page 34
CLIP	The calls list is open ☞ Page 36
NEW	The entry in the calls list is new ☞ Page 36
REPEAT	The caller in the calls list has called several times ☞ Page 36
VOICE	Flashing: Recording mode is active ☞ Pages 33 and 37. On: A name has been recorded for this phone book entry.
+	An emergency call number has been dialled (M1, M2 or M3) ☞ Page 37

Navigating in the menu

All the functions can be accessed via the various menus. Refer to Menu Structure, ☞ Page 33, for information on how to access each respective function.

[MENU]	Open the main menu
[▲] or [▼]	Select the required submenu
[✆]	Open the submenu
[▲] or [▼]	Move to and select the required setting
	Use the digit keys to enter numbers or letters
[✆]	Confirm the entries
[⊗]	Cancel programming and saving processes and return to Standby mode

☞ Every process is automatically cancelled if there is no input within 15 seconds.

Creating phone book entries - example

The way in which to navigate through the menus and enter data is explained by means of the example **Creating phone book entries**. Proceed as in this example for all the settings.

[MENU]	Open the main menu
[▲] or [▼]	
STORE NUMBER, [✆]	Select and confirm the submenu
, [✆]	Enter the phone number (max. 22 digits) and confirm it
, [✆]	Enter the name (max. 16 letters) and confirm it

GB

5 Telephoning

Taking a call

((📞)), ☎ or [🔊]	Take the call

Ending a call

[🔊] or ☎	End the call

Making a call

⁞⁞	Enter the phone number (max. 22 digits)
[⊗]	Following incorrect input, press to delete the last digit
☎ or [🔊]	Dial the phone number

☞ It is also possible to pick up the receiver first to obtain the dialling tone. The digits then entered are dialled immediately. It is not possible to correct wrong digits individually using this dialling procedure.

Redialling

Your telephone stores the last phone number dialled.

☎ or [🔊], [●]	Dial the last number dialled

Calling back missed calls

The telephone stores the numbers of the last 64 calls received in a calls list.

[CLIP]	Open the calls list
[▲] or [▼]	Select the entry required
[↩] ☎	Dial the number

Dialling phone numbers from the phone book

Phone numbers must have been stored in the phone book for this function; ☞ Page 34.

[📖]	Open the phone book
[▲] or [▼]	Select the entry required
[↩]	Dial the number

One-touch dialling buttons

The one-touch dialling buttons M1, M2 or M3 can be used for normal one-touch dialling or as memory locations for automatic emergency call dialling. Be sure to store phone numbers for one-touch dialling first; ☞ Page 37.

[M1], [M2] or [M3]	Press the required quick dial button
☎ or [🔊]	Dial the number

Further information on automatic emergency calls; ☞ Page 37.

Chain dialling

The chain dialling function is used in more complex telephone services, e.g. for telephone banking, call-by-call or calling card procedures. Several numbers stored in the phone book can be transmitted when a connection has already been established. It is also possible to combine numbers for transfer from the phone book with numbers entered manually. Numbers stored in the phone book can be chained and transmitted as required.

[📖]	Open the phone book when a connection has been made
[▲] or [▼], [↩]	Select the phone book entry and transmit the number

Setting the receiver volume

You can adjust the receiver volume using a rotary knob when the +40 dB amplification is activated.

[0 1 2 3]	Adjust the volume with the knob

Increasing the receiver volume to +40 dB

The receiver volume can be increased to +40 dB by pressing the left-hand volume button.

[+40dB]	Increase the receiver volume

Tone control

You can adjust the tone produced in the receiver using a slide control on the right-hand side of the housing.

Adjust the tone using the slide control

The tone control only works when the +40 dB amplification is activated.

Ringing volume

You can adjust the ringing volume using a slide control on the right-hand side of the housing.

Adjust the transmitting loudness rating using the slide control

Talk time display

The duration of a call is displayed in minutes and seconds during the call.

Handsfree

This function is used to listen to the caller via the loudspeaker.

[ ]	Activate the handsfree facility
[ ]	Deactivate the handsfree facility

Adjusting the volume for the handsfree feature

You can adjust the handsfree feature volume using a slide control on the right-hand side of the housing.

Adjust the transmitting loudness rating using the slide control

Muting the microphone in the handset

The microphone in the handset can be activated and deactivated during a telephone conversation.

Press and hold [⊗]	Switch the microphone off (muting)
Release [⊗]	Switch the microphone on

GB

6 Private Branch Exchanges / Suppl. Services

R button on private branch exchanges

If the telephone is connected to a private branch exchange, functions such as transferring calls and automatic call back can be used via the **R button**. Please refer to the operating manual supplied with your private branch exchange to determine which recall (Flash) time must be set in order to use these functions. The dealer where you purchased the exchange can provide information as to whether the telephone will work properly with the exchange. Setting the recall time ☞ Page 33

Dialling pause

In the case of private branch exchanges, it is necessary to enter an access code to get an outside line with its corresponding dialling tone. When using some older private branch exchanges, it takes a little time before the dialling tone becomes audible. Particularly in the case of such private branch exchanges, it is possible to insert a dialling pause after the number for the outside line so that the number can be dialled in a continuous process without having to wait for the dialling tone.

(●)	Insert a dialling pause. "P" is shown in the display.

After dialling the number for the outside line, the telephone then waits approx. 3 seconds before dialling the actual phone number.

☞ The pause can also be entered with the phone number in the phone book.

R button and supplementary services

Your telephone supports the supplementary services offered by your telephone network provider, such as brokering, call waiting and conference calls. The supplementary services can be used in conjunction with the **R button**. Please contact your telephone network provider regarding which flash (recall) time must be set to use the supplementary services. Please contact the telephone network provider with regard to enabling the supplementary services. Setting the flash time; ☞ Page 33.

Caller number display (CLIP[1])

If this function is available with your telephone line, the number of the caller appears in the display when the phone rings. If the caller has suppressed transmission of his phone number, a corresponding message appears in the display. The phone number is not displayed and, as a result, is not stored in the calls list.

☞ The caller number display function is an optional service offered by telephone network providers. Contact your network provider for further information.

[1] **CLIP: C**alling **L**ine **I**dentification **P**resentation

7 Menu Structure

Main menu

Access the main menu by pressing the MENU button.

LCD CONTRAST	LCD CONTRAST 1-5	
TIME/DATE	▲, ▼ ENTER TIME	▲, ▼ ENTER DATE
STORE NUMBER	ENTER NUMBER	ENTER NAME
NAME RECORDING	☞ Page 35	
RECORD MESSAGE	☞ Page 37	
CHECK MESSAGE	☞ Page 37	
LANGUAGE[1]	GERMAN	
	FRENCH	
	ENGLISH	
	ITALIAN	
FLASH	FLASH100	
	FLASH300	
RINGER TONE	RINGER TONE 1-3	
VOICE [2]	VOICE YES	
	VOICE NO	

[1] The outgoing messages and display texts on the telephone are available in 4 languages.

[2] When a button is pressed, a voice accompanies the action. This voice can be activated and deactivated, as required.

8 Phone Book

You can use the phone book to store up to 30 phone numbers together with the associated names.

- Always enter the area access code with the phone numbers so that incoming local calls can also be assigned to a phone book entry.
- When the memory capacity is used up, the message MEMORY FULL appears if an attempt is made to store another number. To create space, an existing entry must first be deleted.
- The phone book entries are arranged alphabetically. To access the required phone book entry directly, press the first letters of the corresponding name.

Entering names

Letters are also imprinted on the digit keys. Letters, digits and special characters are entered by pressing the relevant key the respective number of times.

1	Enter a space
⊗	Delete

☞ To enter the same letter twice, press the button to enter the letter. Wait until the cursor skips one position forwards. Enter the letter again.

Creating phone book entries

MENU	Open the main menu
▲ or ▼, STORE NUMBER, ☎	Select the function and confirm it
⁂, ☎	Enter the phone number (max. 22 digits) and confirm it
⁂, ☎	Enter the name (max. 16 characters) and confirm it

Editing phone book entries

📖	Open the phone book
▲ or ▼	Select the required phone book entry
2 sec MENU, EDIT, ☎	Activate the editing process and confirm it
⁂, ☎	Change the phone number and confirm it
⁂, ☎	Change the name and confirm it

Deleting phone book entries

Deleting a single entry

📖	Open the phone book
▲ or ▼	Select the required phone book entry
⊗ DELETE?	Activate the deleting process
2 sec ⊗ or ▲ ▼	Confirm the deleting process or cancel the process

Deleting all entries

📖	Open the phone book
▲ or ▼	Select the required phone book entry
2 sec ⊗ DELETE ALL?	Activate the deleting process
2 sec ⊗ or ▲ ▼	Confirm the deleting process or cancel the process

GB

Recording names for phone book entries

A name can be recorded for each phone number stored in the phone book. When you subsequently select an entry in the phone book, the recording you made for it is played and you can hear the entry you have selected.

Recording names

MENU	Open the main menu
▲ or ▼	Select the required submenu and
NAME RECORDING , ☎	confirm it
▲ or ▼	Select the phone book entry
Press and hold ☎ ≥VOICE≤	Start recording
Release ☎	End recording

☞ If you do not release the button, recording is automatically stopped after 3 seconds.

Deleting recordings

MENU	Open the main menu
▲ or ▼	Select the required submenu and
NAME RECORDING , ☎	confirm it
▲ or ▼	Select the phone book entry
⊗	Press the button during playback to delete the recording

9 Call List

A total of 64 calls can be stored in the call list. The flashing red LED indicates that new calls have been stored in the call list.

Displaying phone numbers in the call list

▲ or ▼	Open the call log and select an entry

Messages in the display:

Display	Description
NEW	The entry in the log is new.
REPEAT	The caller in the list has rung several times.
OUT OF AREA	This relates to an international call or a call from a private branch exchange.
NO NUMBER	The phone number is received only partially or with errors. Information related to the phone number is not available.
PRIVATE	The caller has suppressed transmission of his/her phone number or the call has come from a private branch exchange.

Storing numbers from call list in the phone book

A phone number in the call list can be stored in the phone book directly.

▲ or ▼	Open the call list and select an entry
2 sec MENU	Start the storing process
COPY TO MEMORY, ☎	Confirm the storing process

The phone number is stored in the phone book without a name. Now enter the name associated with the phone number; ☞ **Editing entries in the phone book** Page 34.

☞ When the number in the phone book is stored together with a name, the name entered also appears in the call list.

Deleting phone numbers in the call list

Deleting individual phone numbers

▲ or ▼	Open the call list and select an entry
⊗ DELETE?	Activate the deleting process
2 sec ⊗	Confirm the deleting process
	or
▲ or ▼	Cancel the deleting process

Deleting all phone numbers

▲ or ▼	Open the call log and select an entry
2 sec ⊗ DELETE ALL?	Activate the deleting process
2 sec ⊗	Confirm the deleting process
	or
▲ or ▼	Cancel the deleting process

☞ Before deleting the phone numbers, check whether the entries have been viewed.

GB

10 Wristband Transmitter

Use the wristband transmitter to call the emergency services exchange or persons for help.

☞ There are several emergency services exchanges available. In some countries, these may be subject to a charge.
You can also use the equipment as a private emergency call device within the family.

Outgoing alert message

There is a default outgoing alert message recorded on the telephone. You can replace this outgoing alert message by one of your own. After activating an automatic emergency call, the phone numbers assigned to buttons M1, M2 and M3 are called automatically. The alert message is played repeatedly until your emergency call is acknowledged by the person receiving it through pressing the "0" key. For this reason, you must end your own alert message clearly telling the receiving party to **"...take this emergency call by pressing the 0 key!"** .

⚠ When recording your alert message, ensure the caller knows who is making the emergency call. Ensure that your message clearly states that it is an emergency call and you require assistance.

Recording an alert message

MENU	Open the main menu
▲ or ▼	
RECORD MESSAGE	Select the required submenu
Press and hold ☎, ≥VOICE≤	Start recording
Release ☎	End recording

Playing back the alert message

MENU	Open the main menu
▲ or ▼	Select the required submenu
☎	Play the outgoing alert message

Deleting the outgoing alert message

MENU	Open the main menu
▲ or ▼	
CHECK MESSAGE	Select the required submenu
☎	Play the outgoing alert message
⊗	Delete the outgoing alert message

Saving emergency call / one-touch dialling numbers

The one-touch dialling buttons M1, M2 or M3 can be used for normal one-touch dialling or as memory locations for automatic emergency call dialling.

MENU	Open the main menu
▲ or ▼	
STORE NUMBER, ☎	Select the required submenu
⁂, ☎	Enter the phone number (max. 22 digits) and confirm it
M1, M2 or M3, ☎	Select the one-touch dialling button and confirm it

☞ You cannot delete the phone numbers stored on the one-touch dialling buttons. Existing numbers are overwritten when new phone numbers are stored.

GB

Wristband Transmitter

Automatic emergency calls

An emergency call is initiated by pressing and holding the buttons M1, M2 or M3 on the telephone or by using the wristband transmitter. The wristband transmitter must be programmed in the telephone (refer to Page 26). If you have not assigned phone numbers to buttons M1, M2 or M3, no phone number is dialled but a loud acoustic signal is issued from the telephone.

☞ Pay attention that the wristband transmitter is in range of the telephone.
There should always be a fully charged battery in the wristband transmitter.

Automatic emergency calls using the phone

5 sec [M1], [M2] or [M3]	Start the automatic emergency call function
5 sec [M1], [M2], [M3] or [🔇]	End the automatic emergency call function

Automatic emergency call via the wristband transmitter

Press and hold the Transmit button (1) on the wristband transmitter until an acoustic warning signal is issued.

☞ After initiating an emergency call, a new emergency call can only be started after 10 minutes.

Starting/Ending the automatic emergency call

The phone behaves as follows on starting the automatic emergency call:

1. The telephone loudspeaker is activated. The acoustic "Emergency call active" signal is issued for 15 seconds.
2. You will then hear the dialling tone and the phone numbers assigned to the M1, M2 and M3 buttons are dialled automatically, in succession, at an interval of approx. 60 seconds. The outgoing alert message recorded is played in a continuous cycle.
3. As soon as the call is taken by one of the persons called, they hear the alert message. The person taking the call stops the alert message by pressing the "0" key on their phone. You can then converse for 3 minutes. During this period, the handsfree function remains active on the phone.
4. If a call is not taken, the connection is interrupted after 3 minutes. A new attempt is then made to dial the numbers assigned to buttons M1, M2 and M3, as described above.
5. If the call is interrupted before the 3 minutes have expired or the receiver is replaced on-hook, an attempt is then made to establish a connection to the next phone number stored until all 3 numbers have been dialled. The engaged signal can be heard on the phone making the emergency call.

☞ An emergency call which has been initiated can be terminated after 5 seconds by pressing the M1, M2 or M3 button for 3 seconds.

Battery, wristband transmitter

The wristband transmitter is provided with a battery control function which monitors the capacity of the battery during a transmission process. If the LED flashes while the button is pressed or the LED does not light up at all, the battery must be replaced.

The wristband transmitter is splashproof. To ensure it remains so after changing the battery, we recommend you have the battery changed at your sales outlet or by a specialist.

Programming more wristband transmitters

Other Easywave products, such as the RT27 necklace transmitter, RT28 pushbutton transmitter or fall mats, can also be used as transmitters.

A maximum of eight transmitters can be programmed in the telephone (refer to Page 26).

When 8 transmitters are already programmed, programming another causes the first transmitter to be overwritten.

Deleting programmed transmitters

The delete function deletes all the transmitters which have been programmed.

1. Press the PTx button on the underside of the phone until the LED flashes quickly.
2. Release the PTx button.
3. Press the PTx button again, longer than 4 seconds, until the LED lights up continually.

The LED goes out after 4 seconds and the programmed transmitters are deleted.

11 In Case of Problems

Service hotline

Should problems arise with the telephone, please refer to the following information first. In the case of claims under the terms of guarantee, contact your sales outlet.

Problems and solutions

Problems	Solutions
No telephone calls possible	- The telephone line is not connected properly or is defective. Only use the telephone connection cable supplied. - The power adapter plug is not plugged in or there is a complete power failure.
Some functions, e.g. +40 dB amplification or handsfree, do not work	- Check that the batteries are inserted correctly, are the correct type and they are not empty.
Caller numbers (CLIP[1]) are not displayed	- The caller number display function is an optional service offered by telephone network providers. Contact your network provider for further information. - The caller has suppressed the transmission of their phone number.
The LED on the wristband transmitter flashes or does not light up	- Change the battery
Telephone does not respond to wristband transmitter	- Check the battery - Programme the wristband transmitter in the telephone again

[1] **CLIP: C**alling **L**ine **I**dentification **P**resentation = Displays the caller's phone number.

12 Maintenance / Guarantee

Maintenance

- Clean the housing surfaces with a soft, fluff-free cloth.
- Never use cleaning agents or solvents.

Guarantee

The equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply where the cause of equipment malfunction is the fault of the telephone network operator or any interposed private branch extension system. The terms of guarantee do not apply to the batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase.

All deficiencies resulting from material or production faults which occur during the period of guarantee will be eliminated free of charge. Rights to claims under the terms of guarantee are annulled following intervention by the purchaser or third parties. Damage caused as a result of improper handling or operation, incorrect positioning or storing, improper connection or installation, Acts of God or other external influence are not covered by the terms of guarantee. In the case of complaints, we reserve the right to repair or replace defect parts or provide a replacement device. Replacement parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer.

If your device does show signs of a defect within the period of guarantee, please contact the sales outlet where you purchased the device, producing the purchase receipt as evidence. All claims under the terms of guarantee in accordance with this agreement can only be asserted at the sales outlet. No claims under the terms of guarantee can be asserted after a period of two years from the date of purchase and hand-over of the product.

Declaration of Conformity

This device fulfils the requirements stipulated in the EU directive:

1999/5/EU directive on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity. Conformity with the above mentioned directive is confirmed by the CE mark on the device.

You can request the Declaration of Conformity from the sales outlet.

GB

13 Index

A

Automatic emergency calls, 38

B

Base unit, 25
Battery, wristband transmitter, 39

C

Call list, 36
Caller number display, 32
Calling back missed calls, 30
Chain dialling, 30
Contrast setting, 33
Create phone book entries, 29
Creating, 34

D

Date, 26
Date and time setting, 33
Declaration of Conformity, 41
Deleting, 34
Deleting phone numbers in the call list , 36
Dialling pause, 32
Dialling phone numbers from the phone book, 30
Display messages, 36
Displaying phone numbers in the call list, 36

E

Editing, 34
Emergency call outgoing message, 37
Ending a call, 30
Entering names, 34
Entering text, 34
Explanations, 29

G

Guarantee, 41

H

Handsfree, 31
handsfree volume, 31

I

Icons in the display, 29
Increasing the receiver volume, 30
Inserting the batteries, 26

L

Language setting, 33

M

Main menu, 33
Maintenance, 41
Making a call, 30
Menu structure, 33
Messages, 36
Muting the microphone, 31

N

Navigating in the menu, 29
Notation, 29

O

One-touch dialling buttons, 30
Operating elements, 28
Operating the telephone, 29

P

Package contents, 25
Phone book, 34
Phone book entries, 34
Private branch exchanges, 32
Problems, 40
Problems and solutions, 40
Programming the wristband transmitter, 26

R

R button and supplementary services, 32
R button on private branch exchanges, 32
Receiver volume, 30
Recording names for phone book entries, 35
Redialling, 30
Ringer tone setting, 33
Ringing volume, 31

S

Safety information, 24
Saving, 34
Saving emergency call numbers, 37
Saving one-touch dialling numbers, 37
Service hotline, 40
Starting up, 25
Storing number from calls log in phone book, 36
Supplementary services, 32

T

Taking a call, 30
Talk time, 31
Telephoning, 30
Time, 26
Tone control, 31
Troubleshooting, 40

W

Wall installation, 27
Wristband transmitter, 37

BITTE WENDEN SIE SICH IM GARANTIEFALL AUSSCHLIESSLICH AN DEN HÄNDLER, BEI DEM SIE DAS GERÄT GEKAUFT HABEN, UND VERGESSEN SIE NICHT, DEN KAUFBELEG VORZULEGEN.
UM UNNÖTIG LANGE WARTEZEITEN ZU VERMEIDEN, SENDEN SIE REKLAMATIONSGERÄTE BITTE NICHT AN UNSERE BÜROADRESSE.
BEI FRAGEN ZUR BEDIENUNG UND GARANTIELEISTUNG LESEN SIE BITTE DIE BEDIENUNGSANLEITUNG.

IN THE CASE OF CLAIMS BASED ON THE TERMS OF GUARANTEE, PLEASE CONTACT THE SALES OUTLET WHERE YOUR PURCHASED THE PRODUCT, REMEMBERING TO PROVIDE THE PURCHASE RECEIPT AS EVIDENCE OF PURCHASE.
TO PREVENT ANY UNNECESSARY DELAYS, PLEASE DO NOT SEND THE DEFECTIVE DEVICE TO OUR OFFICE ADDRESS.
IN THE CASE OF QUERIES RELATED TO OPERATION AND TERMS OF GUARANTEE, PLEASE READ THE OPERATING MANUAL.

ELDAT GmbH
Königs Wusterhausen
Internet: www.eldat.de - E-mail: info@eldat.de

Händler / Dealer: